




Noble Welding • 574-642-5010 x3
11688 N 1200 W, Ligonier, IN 46767


MOBILE CHICKEN COOPS 10 X 18

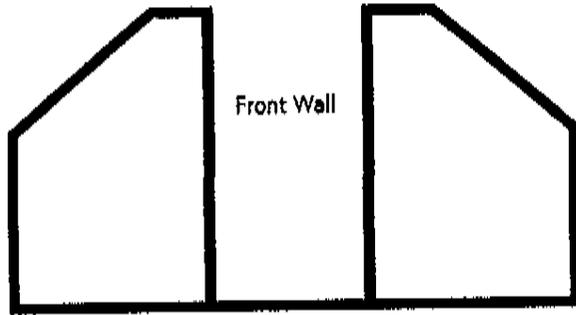


Front Wall




Door

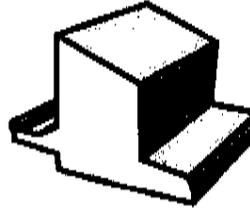


Nesting Box (optional)

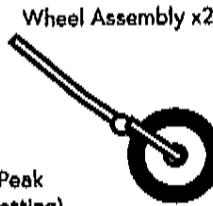

Wheel Assembly x2

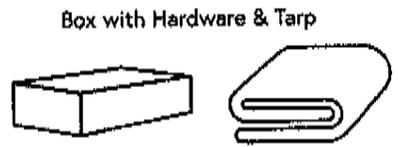

Box with Hardware & Tarp

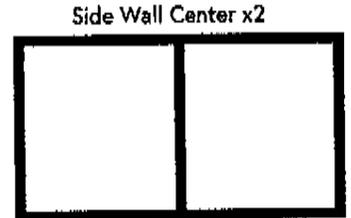


Side Wall Center x2




Side Wall Back x2




Side Wall Front x2

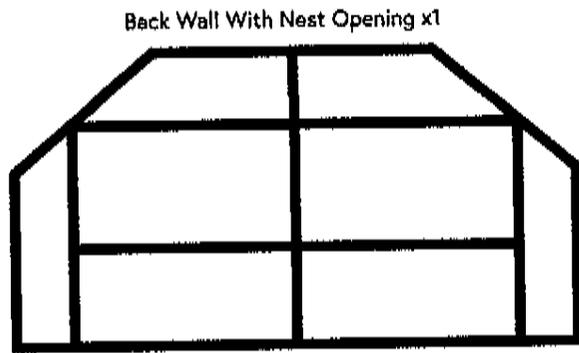


Back Wall With Nest Opening x1

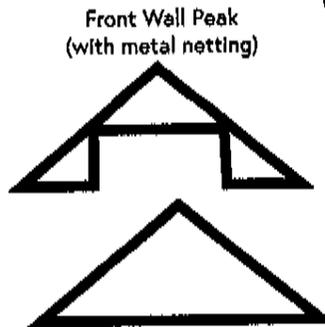

Front Wall Peak (with metal netting)




Back Wall Peak (without metal netting)

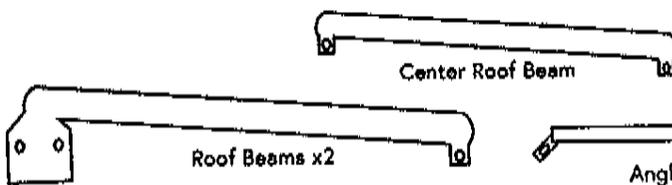


Roof Beams x2



Center Roof Beam



Angled Roosting Bars x4

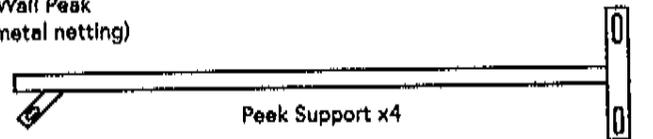

Peek Support x4



Straight Roosting Bar x3

ASSEMBLY INSTRUCTIONS

Step 1: Layout coop walls on ground in open area, netting side up as netting should be installed on the inside of the coop. (Suggested 20' x 30' working area). Attach side wall front and back on each side with listed hardware. (See Figure 2). Stand up side walls and front wall. Attach with listed hardware. With walls standing bolt wall peaks on the front and rear wall. Bolt holes are drilled with wall parts together and then numbered. Match numbers on wall parts for correct fit.

Parts needed: Front and Back Walls, Side Wall Front x2, Side Wall Back x2, Front and Back Peak. Side Panel Hardware Bag.


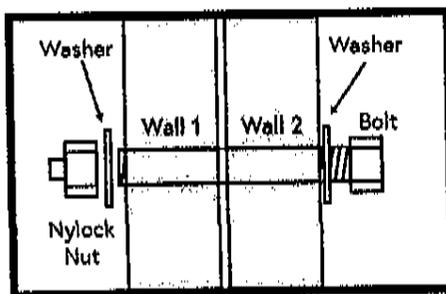


Figure 1

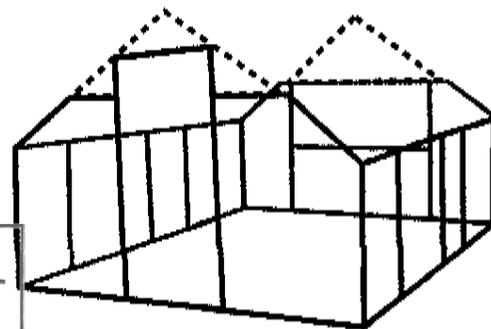

PLANNING SECTION
LEITRIM COUNTY COUNCIL


24/02/26

REF P. ED-26-08

ASSEMBLY INSTRUCTIONS (CONT.)

Best done with two people. Can be done with just one. Stand peak supports together, peak supports can rest on the walls. Use one bolt to secure the beams in the center on either side of where the peak comes together. It is best to leave this center bolt loose for now. With the four roof components loosely held together attach the outer end of the beams to the front and back wall at their peaks. Once the beams are secured return to the center and tighten the main bolt. Attach the bottom of each support to the appropriate spot on the walls.

Parts Needed: Roof Beam x2, Peak Support x 2, Peak Hardware Bag

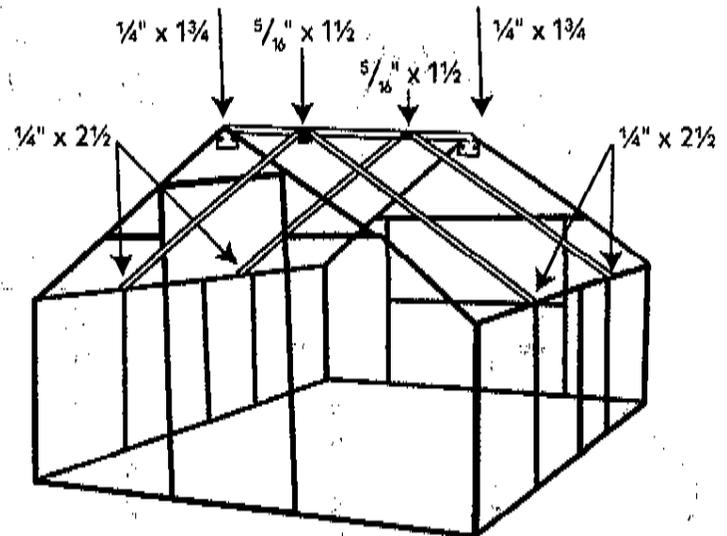

With the roof is complete lay out the roost bars and attach to the side and back walls. Attach the wheel assemblies to the outside of the coop. Make special note of the plastic washer. This should be between the assembly and the coop side (figure 4).

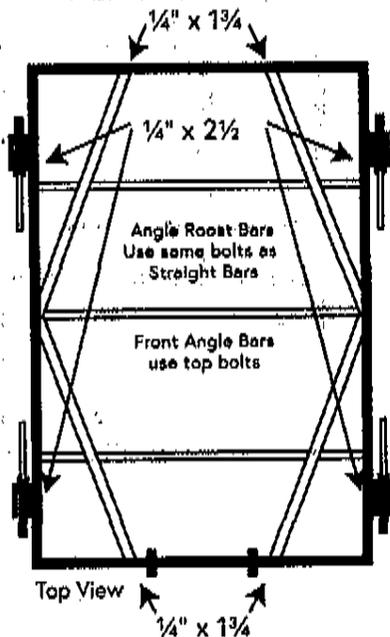


Figure 4

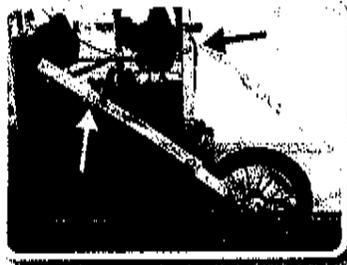


Figure 5

Attach chain to back roost bar bolt (figure 5). Attach hook to wheel assembly arm as shown in figure 5.

Parts Needed: Straight Roosting Bar, Angled Roosting Bar x 2, Wheel Assembly x 2, Roost Bar Hardware, Chains.

Attach Door to Coop.

Attach the latch assembly with the appropriate bolts to the frame outside the door. Attach the latch bar to the door. The safety release attaches directly to the metal netting (Figure 7).

Parts Needed: Latch Assembly, Latch Hardware Bag.

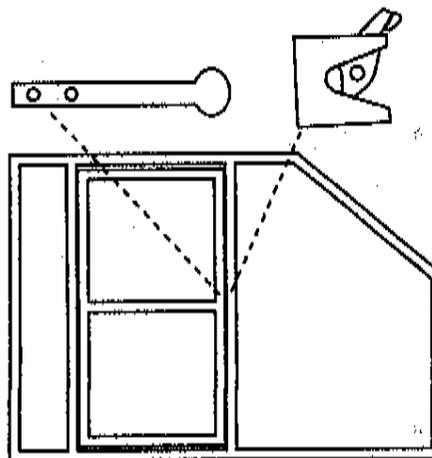


Figure 7



Unfold tarp, lay out over coop and attach with bungee cords.
Parts Needed: Tarp, Bungee cords